



Sampson Mills



60 SECOND INSTALL VIDEO


F16 INSTRUCTIONS




#01
CUT CHANNEL



#02
ADD TRACK

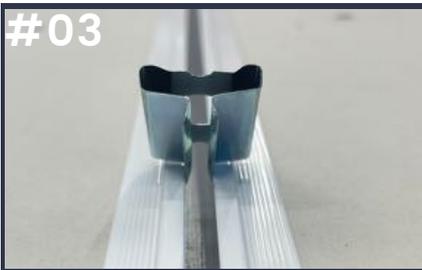


#03
INSERT
PROFILE PROTECTOR

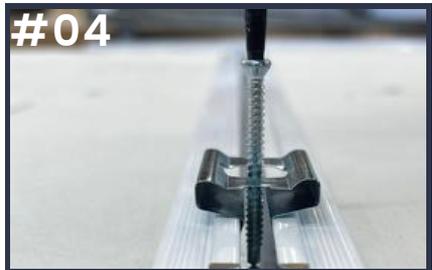


#04
SCREW IN TRACK




#05
REMOVE END CAP
GLIDER SCREW

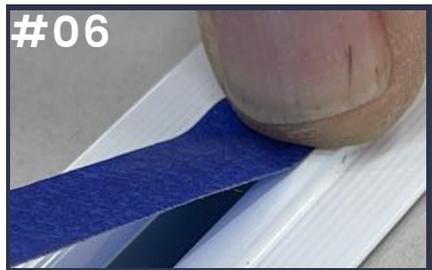

#06
 **MUST APPLY
1/2" PAINTERS TAPE**

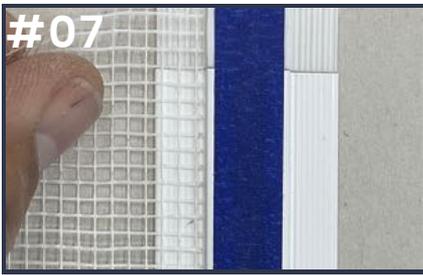


#07
APPLY SHEETROCK TAPE
ONTO FLANGE

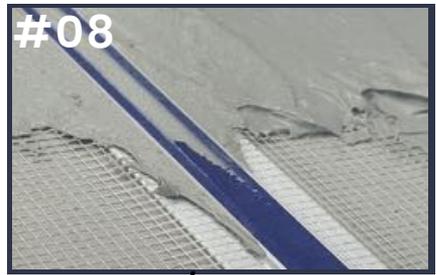

#08
ADD MUDD/PLASTER



#09
PAINTERS TAPE MUST BE
KEPT ON DURING
SANDING & PAINTING

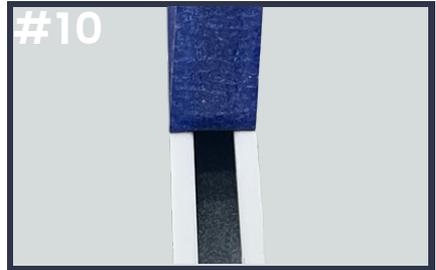

#10
MAKE SURE PLASTER IS
SANDED DOWN BEFORE
REMOVING PAINTERS TAPE




#11
CLEAN WITH DRY CLOTH.
MAKE SURE TRACK IS FREE
OF DEBRIS BEFORE YOU
APPLY "SLICK AS A FOX"



#12
ONCE CEILING IS DRY AND
YOU REMOVE PAINTERS
TAPE ADD GLIDERS



#13
LOCK IN END CAP BLOCK

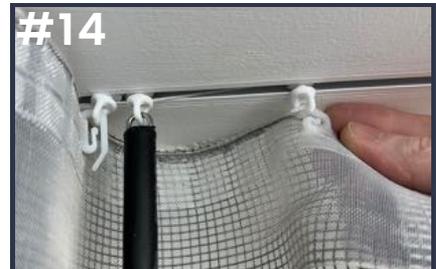

#14
ADD YOUR CURTAIN